







Auto Stop Function

Stop when sharpen finished, prevent jamming



Easy to Change Battery

2 x AA Battery not Included



Non-Slip Bottom

Increase friction, stay firmly on desk while working

