 


deli

 
USER MANUAL

Electric Pencil Sharpener No. EH500

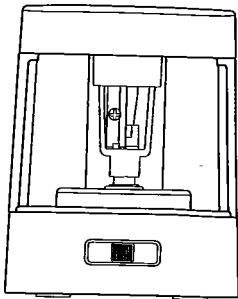


We would like to extend our most sincere appreciation to you for selecting our electric pencil sharpener. To ensure your safety, please read this manual before using the pencil sharpener and keep this manual for future reference. Please be informed that our company will not be held responsible for any accidents or injuries caused by misuse or improper use of this electric pencil sharpener. This manual is subject to changes without prior notice.

PRODUCT DIAGRAM

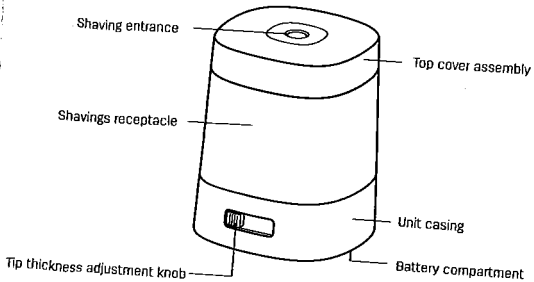


HOW TO INSTALL THE BATTERIES

1. Open the battery compartment door at the bottom of the electric pencil sharpener (Figure A).
2. Insert 2 AAA battery cells into the battery compartment of the electric pencil sharpener. Pay attention to the positive and negative poles, and do not reverse the positive/negative poles (Figure B).
3. Close the battery compartment door (Figure C).

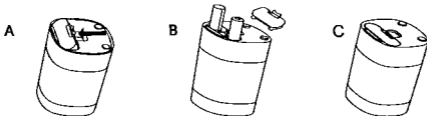

HOW TO REPLACE THE SHAVING BLADES

1. Turn the top cover assembly counterclockwise (Figure D) ;
2. Push the shaving entrance with your finger until the shaving blade assembly pops out (Figure E, Figure F);
3. Align the new shaving blades with the corresponding mating holes in the cover assembly and force the shaving blades into its proper location (Figure G, H);
4. Align the base hole of the top cover assembly into the unit casing and turn the assembly housing clockwise (Figure I).

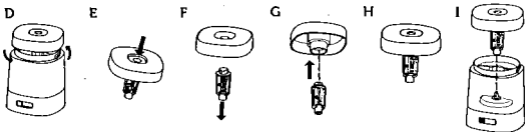

HOW TO ADJUST THE TIP THICKNESS

By adjusting the tip thickness knob to achieve the tip thickness you prefer, slide the knob to the left for a finer shaved pencil tip, or slide the knob to the right for a thicker shaved pencil tip.

INSTRUCTIONS

1. This pencil sharpener is intended for sharpening standard wooden pencil (6.5 mm-8 mm in diameter).
2. Please set the tip thickness knob before shaving.
3. Hold and insert the pencil vertically into the shaving entrance, slowly increasing the downward pressure until the electric pencil sharpener motor is activated. (Figure J)
4. To ensure the normal sharpening operation, please keep a moderate and steady pressure on the pencil during the sharpening process. The sharpening capability of this sharpener may be affected if the downward pressure is too light or too heavy.
5. Once the tip of the pencil had been properly sharpened, the shaving blades assembly will idle, you can take out and use the sharpened pencil. Pencil with an off-center lead may influence the sharpening effect, but it will not affect the use of the pencil.
6. Please allow the sharpener to cool-down for 5 minutes after a continuous sharpening of 30 pencils, so as to avoid shortening the life of the pencil sharpener.
7. Please reduce the downward pressure if the pencil sharpener's motor speed drops significantly or cease to run. Replace the batteries if this problem persists. (Please refer to "How to install the batteries")
8. To ensure the smooth sharpening operation, please open the top cover assembly and clean the shavings receptacle on a timely manner (Figure K).
9. When the top cover assembly is removed, the pencil sharpener will not function properly. Place the top cover assembly into its correct position before use.



MAINTENANCE GUIDE

1. How to clean this electric pencil sharpener

1. Remove the batteries

2. Clean the interior of the shaving blades assembly with a brush

3. You can wipe and clean the electric pencil sharpener unit casing with a soft cloth dampened with neutral soap and water (please do not use scrubbing powder, benzine or thinner).

2. When the electric pencil sharpener is obviously not sharpening the pencils (except when the battery is dead), you may need to replace the shaving blades (please refer to "How to replace the shaving blades").

TIPS AND REMINDERS

1. Do not mix old and new batteries, or different types of batteries (alkaline/standard/-carbon zinc or rechargeable/nickel-cadmium batteries).

2. Please pay special attention when you insert the batteries and don't reverse the positive/negative poles.

3. In order to avoid damage caused by battery liquid leakage, please remove the batteries when you are not using the pencil sharpener for an extended period of time.

4. Do not put your fingers into the shaving entrance.

5. To prevent your finger being hurt by the blades, it is strictly forbidden to touch the shaving blades with your finger.

6. In order to avoid any damage to the motor of this unit, please remove the pencil as soon as it is sharpened.

7. It is strictly forbidden to disassemble or modify this electric pencil sharpener.

8. This product is only intended for the use of sharpening standard wooden pencils (6.6 mm-8 mm in diameter). It is not intended to be used for sharpen hard materials such as fountain pens and chalks, or soft pens (crayons and oil pastels), any misuse will shorten the life of the blades.

PRODUCT CERTIFICATE

01.

Inspector: ~~20200910~~

Production Date: _____

Version: 1.0

Keep for future use

DELI GROUP CO., LTD.
Http://www.deliworld.com
MADE IN CHINA

**Address: Deli Industrial Park in Ninghai
County, Ning Bo, Zhejiang, China**
National Service Hotline: 400-185-0555.