## iBind A20

Comb Binding Machine
Plastikbindemaschine
Perforelieuse à peignes plastique
Máquina de canutillo de plástico



Lite® Punching Effort
Lite® Punching Sound

20% LESS





## iBind A20

Comb Binding Machine Plastikbindemaschine Perforelieuse à peignes plastique Máquina de canutillo de plástico



Comb	Sheets	Margin	Comb	Sheets	Margin
6mm	25	2	22mm	195	5
8mm	45	2	25mm	220	5
10mm	65	3	28mm	245	5
12mm	95	3	32mm	270	5
14mm	125	4	38mm	320	5
16mm	145	4	45mm	370	5
19mm	155	4	51mm	450	5

## **General Safeguards**

- · Place your comb binder on a stable surface.
- Use the machine only for its intended purpose of punching and binding paper and document covers according to the indicated specifications.
- Always test the machine with some scrap paper before punching the final document.
- Take care that there are no staples or such like in the documents to be bound.
- Empty the waste tray regularly.
- Lift the machine from the bottom, not the cover or the handle.
- Unauthorized maintenance is not allowed.

## **Specifications/Technical data**

	iBind Comb Binder A20		
Max. Punching Capacity, paper	20 sheets(80 gsm)		
Max. Punching Capacity, plastic foils	PVC, 1 sheet, 0.15mm		
Punching Margin Control	2mm-5mm		
Binding Capacity	Max. comb size, 51mm Max. document, 450 sheets (80gsm)		
Max. Width of Paper	DIN A4 (297mm)		
Punching Slots	21		
Adjustable Edge Guide	A4/A5 - rotary		
Net Weight	4.6kgs		
Dimensions (H×W×D)	370×330×180 (mm)		

Note: Please do not insert a binding comb until you finish punching papers and covers of the required booklet.



(Fig. 1)
Punching preparation: Turn
the **Wheel to adjust A4/A5**paper



(Fig. 2)
Punching preparation: Pull
the **Punching margin control**from 2mm to 5mm



(Fig. 3)
Push paper(max. 20 sheets of 80gsm at one time) into the **Paper entry** 



(Fig. 4)
Pull the **Punching handle**all the way down until it stops
to punch completely through



(Fig. 5)
Insert a plastic comb. Pull over the **Comb opening** handle to open it



(Fig. 6)
Load punched sheets directly onto the opened comb



(Fig. 7)
When finished, release the Comb opening handle and return the Punching handle to the original position



(Fig. 8)
Remove the bound booklet and enjoy your finished work



(Fig. 9) Empty the **Waste tray**